SANDOVAL OPEN ROAD ADJUSTABLE BARS



ADM-UN-HB-33 | ADM-UN-HB-34

NOTE: Bar end and knuckles have been pre-installed. Seperating these components is discouraged.

- 1) Start by running the wires through the bar. *De-pinning connectors and removing black OEM sheath are highly encouraged .
- 2) With controls installed, wires can be ran through the lower bar while simultaneously installing lower bar into the knuckle.
- 3) Tighten the 3 screws of knuckle lightly to keep knuckle from easily turning with remainder of installation.
- 4) With bars installed onto clamps, final positioning can be adjusted and tightened to spec (See attached torque specs)

TORQUE SPECS

