


2014 - 2023 BATWING NACELLE CUT TEMPLATE

(Older models require ignition relocation)

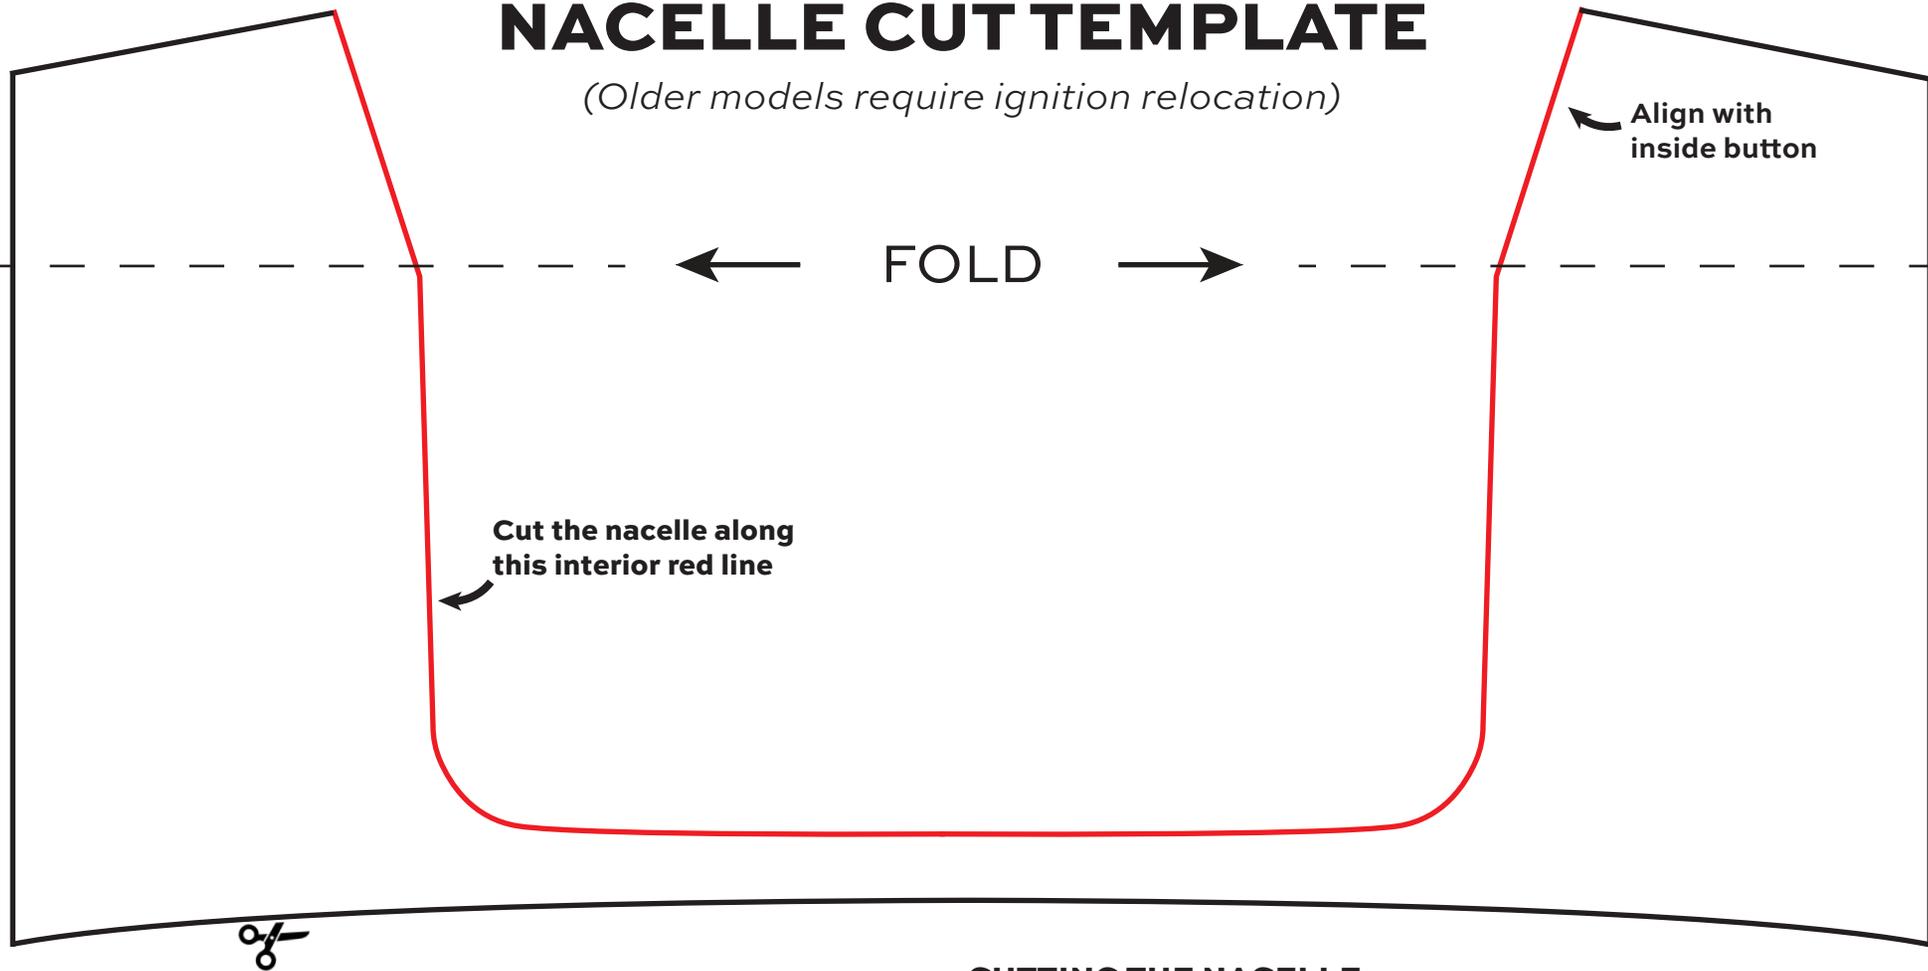

EXAMPLE:




CUTTING THE NACELLE:

- 1) Cut printed template along the solid lines
- 2) Align the paper to the nacelle
- 3) Place tape over cutting area
- 4) Scribe with marker
- 5) Cut with dremel

Confirm printed paper is correct by confirming this scale.

If it is not correct, please contact support@krausmotorco.com

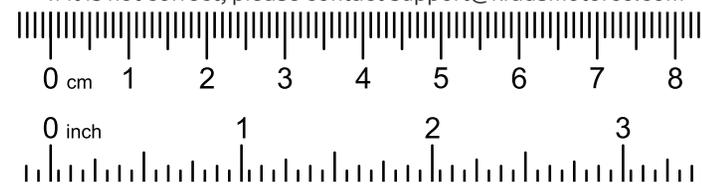

NOTE: Be sure to print in "Actual Scale"