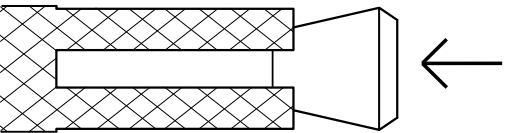

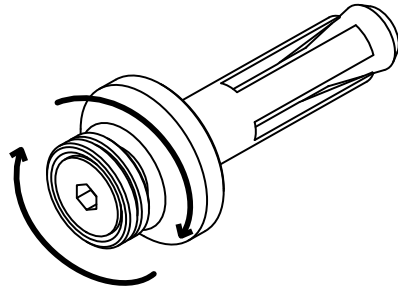
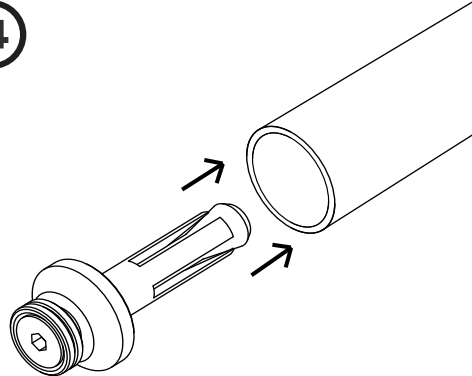
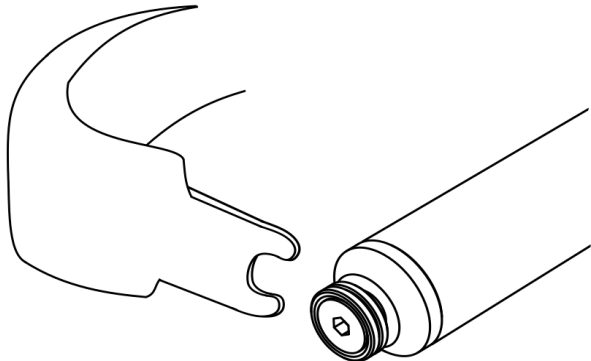


RECON HANDGUARD BOBBINS

INSTALLATION GUIDE

DISCLAIMER: Kraus Motor Co. recommends that you defer to a certified mechanic or technician on any installation when possible. Refer to your OEM service manual for procedure, step by step procedures, required tools and specifications to make sure all pieces and parts are properly installed. Kraus Motor Co. is not responsible for improper installation of any OEM or Kraus component/kit. After completing installation, go for a slow, careful test ride. Afterwards, double check all pieces, parts and systems. Improper installation may result in severe injury or death.

1  Insert and align expansion nut on the expansion insert	2  Insert the bolt through the bobbin, expansion insert, then thread into the expansion nut	3  Snug bolt until fingertight	4  Insert into handlebar and begin to tighten
5 Once installed and tightened, mount handguard to bobbin 			*Allows for mounting on 7/8" Handlebars *Aftermarket handguards may be compatible *Works with OEM Pan America Handguards *Verify knurling is gripping the inside of the handlebar and will not twist