FOOTPEG REFERENCE

PRODUCT GUIDE

TO BEGIN INSTALLATION...

- Verify the style of footpeg mount matches what is currently on your motorcycle
NOTE: *The Universal Footpegs can be used as highway pegs.*

- Remove C-Clip from Footpeg Pivot Pin

- Remove Pivot Pin, then Footpeg

- Locate your footpeg below and follow the rest of the installation

- Install Spring and Ball if applicable, then Pivot pin and C-Clip

- Rotate footpeg on splines in a suitable position, then tighten bolt in place
Torque to 11 ft-lbs (15 N-m)

Installation is now complete!

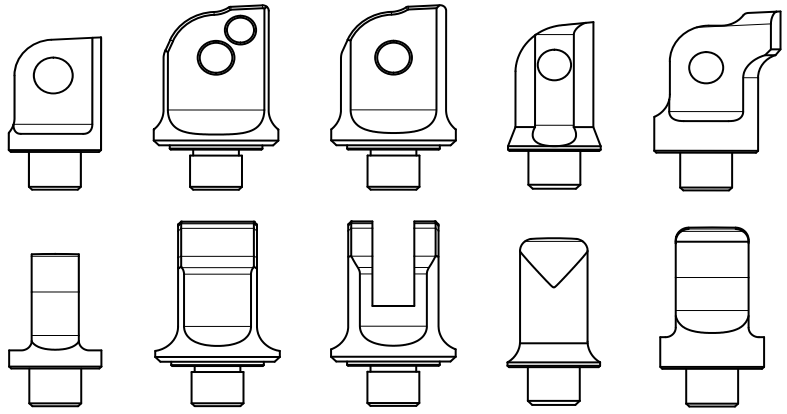

UNIVERSAL

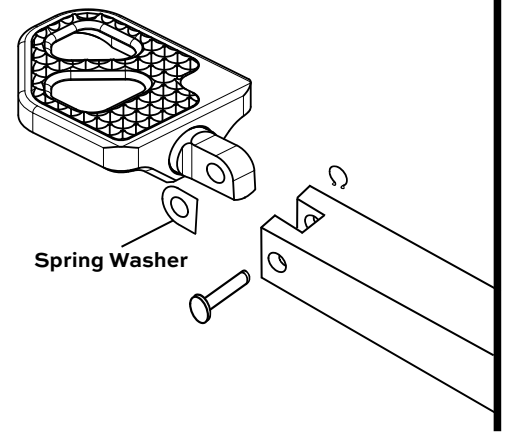

18+ SOFTAIL RIDER

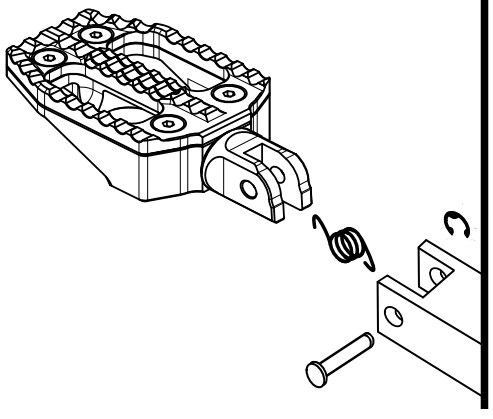

18+ SOFTAIL PASSENGER

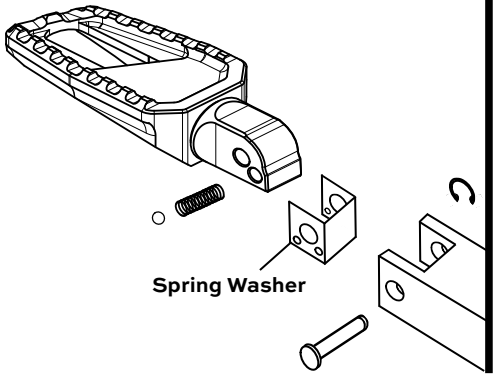

TOURING/INDIAN CRUISER

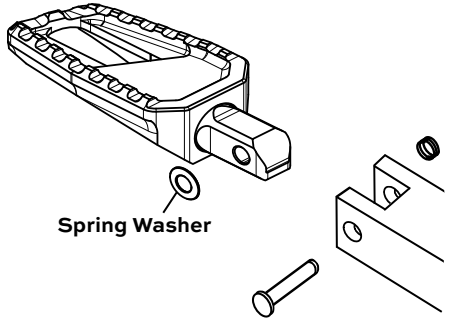

©2025 - Kraus Motor Company

support@krausmotorco.com