

FOOTPEG REFERENCE

PRODUCT GUIDE

TO BEGIN INSTALLATION...

- Verify the style of footpeg mount matches what is currently on your motorcycle

NOTE: *The Universal Footpegs can be used as highway pegs.*

- Remove C-Clip from Footpeg Pivot Pin

- Remove Pivot Pin, then Footpeg


- Locate your footpeg below and follow the rest of the installation

- Install Spring and Ball if applicable, then Pivot pin and C-Clip


- Rotate footpeg on splines in a suitable position, then tighten bolt in place

Torque to 11 ft-lbs (15 N-m)


Installation is now complete!

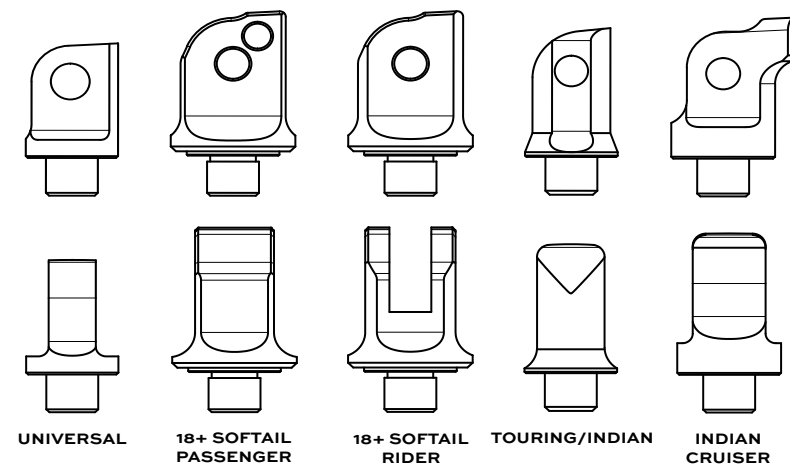


UNIVERSAL

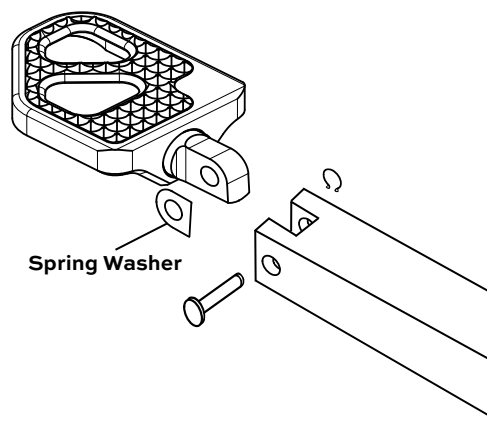

18+ SOFTAIL
RIDER

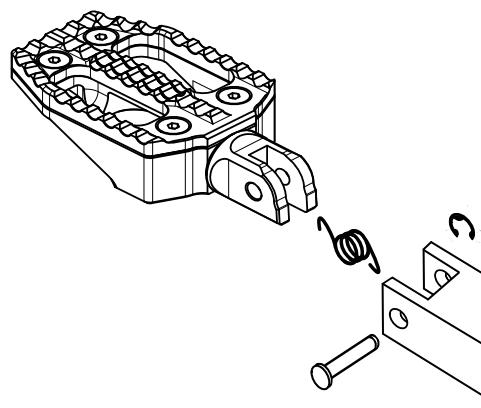

18+ SOFTAIL
PASSENGER

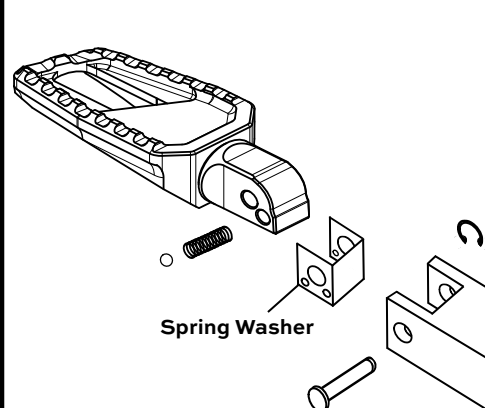

TOURING/INDIAN CRUISER

