Full Deck Light Kit - With Denali Lighting ('24+ Road Glide) INSTALLATION GUIDE

DISCLAIMER: Kraus Motor Co. recommends that you defer to a certified mechanic or technician on any installation when possible. Refer to your OEM service manual for procedure, step by step procedures, required tools and specifications to make sure all pieces and parts are properly installed. Kraus Motor Co. is not responsible for improper installation of any OEM or Kraus component/kit. fter completing installation, go for a slow, careful test ride. Afterwards, double check all pieces, parts and systems. Improper installation may result in severe injury or death.

1

NOTE: Front fairing, headlight, tank, and seat must be removed prior to installation.


Route the wiring harness from the battery up through the space between the upper and lower triple trees into the fairing.

2

Use the supplied 1/4"-20 screws to secure the mounting bracket to the inner fairing while connecting the Full Deck Light Kit Harness.

3

Aim the Denali D14, DL4, and DL2 lights according to the Harley-Davidson Service Manual specifications.

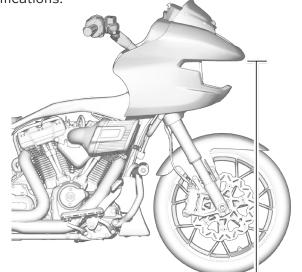

Aiming Reference:

Measure the distance from the bottom of the fairing to the ground, then subtract 2 inches.

This measurement marks the ideal center of the low beam at 16.5 inches from the ground.

