


After running the wiring to your build specifications, you will need to pin the plug that came with your wiring extension with the colored wires according to **Diagram A**.

## DIAGRAM A

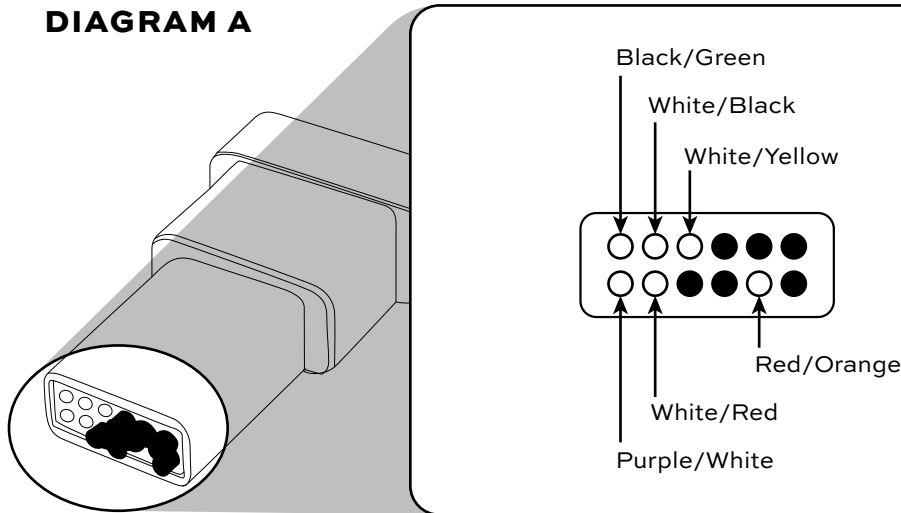

## TECH TIP

1. We recommend to remove the green water proof seal on the backside of the female connector and position wires through the seal before inserting wires into the connector, this will insure correct location of pins.
2. When pinning your connector make sure to determine which side is top and bottom. Failure to follow this step may result in improper pinning of connector.